

**IMPORTANT! READ CAREFULLY KEEP THIS USER'S MANUAL
IN A SAFE PLACE FOR FUTURE REFERENCE!**

INSTRUCTION MANUAL FOR HIGH CHAIR “WOODY”

WOODY



This high chair **chipolino** has been manufactured in accordance with the requirements of Directive 2001/95/EC of the European Parliament and of the Council and complies with EN 14988 Children's high chairs. Safety requirements and regulations of the national legislation, as well as the Consumer Protection Law.

**ATTENTION! YOUR CHILD WILL BE MOST SECURE IF YOU FOLLOW
THE INSTRUCTIONS AND RECOMMENDATIONS GIVEN IN THIS USER'S MANUAL!**

- ❖ **CAUTION! NEVER LEAVE YOUR CHILD UNATTENDED!**
- ❖ **CAUTION! THIS PRODUCT IS SUITABLE FOR CHILDREN, WHO CAN SIT ALONE UNAIDED (MINIMUM 6 MONTHS), AGED UP TO 3 YEARS AND WEIGHING NO MORE THAN 15 KG.**
- ❖ **CAUTION! ALWAYS USE THE SAFETY BELTS, WHEN THE CHILD IS IN THE CHAIR! ALWAYS CHECK IF THEY ARE SECURELY FIXED TO THE HIGH CHAIR'S FRAME!**
- ❖ **CAUTION! DANGER OF FALLING: DO NOT LET THE CHILD CLIMB ON THE PRODUCT!**
- ❖ **CAUTION! DO NOT USE THE HIGH CHAIR BEFORE HAVING MADE SURE THAT ALL PARTS ARE IN GOOD ORDER AND ARE SET IN THE CORRECT POSITION!**
- ❖ **CAUTION! KEEP THIS PRODUCT AWAY FROM FIRE! BE AWARE OF THE RISK OF OPEN FIRE AND OTHER SOURCE OF STRONG HEAT IN THE NEAR VICINITY OF THE HIGH CHAIR!**
- ❖ **CAUTION! OBSERVE THE RISK OF THE PRODUCT TILTING IF THE CHILD REACHES AND PUSHES WITH ITS FEET SOLD BASE SUCH AS A TABLE.**
- ❖ Assembly of the product to be done only by adult!
- ❖ To avoid injury, make sure your child is at safe distance during folding and unfolding of the product!
- ❖ This high chair is not suitable and must not be used by children, who cannot sit unaided and stay in this position by their own!
- ❖ This high chair must not be used for children weighing more than 15 kg!
- ❖ The high chair has a single seat, intended for one child only.
- ❖ Do not lift the chair by the food tray!
- ❖ Discontinue using the product if you find any missing or damaged parts!
- ❖ Do not let your child stand in the high chair!
- ❖ Never lift, move, make any setting or repair to the chair, while there is a child in it!
- ❖ Do not place the chair on elevated and/or uneven surfaces, while there is a child in it!
- ❖ Do not place the chair near stairs, pools or other hazardous areas!
- ❖ Use the high chair only by its purpose.
- ❖ All additional belts that are not supplied by the producer, must comply with European Standard EN 13210.
- ❖ Do not use any spare parts or other components, which are not approved by the producer! The producer does not take any responsibility for the safety of the child when you have not used the proper and original spare parts, approved and provided by him!
- ❖ Do not apply any changes or modifications to the high chair's construction! Contact the dealer or an authorized repair service for advice and/or repair instead!
- ❖ Do not allow children younger than 3 years near the high chair during the assembly or disassembly, in order to prevent the risk of injury or swallowing of small parts!
- ❖ The packaging of the product must be kept out of the reach of children to avoid the risk of strangulation!

MAIN FEATURES

- ❖ High chair is suitable for one child, who can sit alone unaided
- ❖ High chair is suitable for one child aged up to 3 years and weighing not more than 15 kg.
- ❖ Product can be used as high chair and small chair
- ❖ 5-point safety harness system
- ❖ Food tray in 3 positions – can be adjusted forth and back



Babies, who can sit alone and unaided






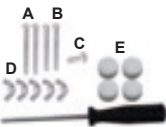


Young children



Elder children

MAIN PARTS

| | | | |
|---|---|---|--|
|  | Seat - 1 pc |  | Food tray - 1 pc |
|  | Foot rest - 1 pc |  | Leg support - 2 pcs |
|  | Upper legs - 4 pcs Down legs - 4 pcs |  | <ul style="list-style-type: none"> • Screws A, B, C - 5 pcs • Nuts D - 5 pcs • Screwdriver - 1 pc • Anti-slip pads for small chair E - 4 pcs |

ASSEMBLY INSTRUCTION AND FUNCTIONS

ATTENTION! Follow exactly the instructions given and the order assembly and usage, described in texts and pictures. In order to complete the assembly, you need a screwdriver.

ATTENTION! CHECK THE STABILITY OF FIXING AFTER EACH OPERATION!

1. ASSEMBLY OF UPPER AND DOWN WOODEN LEGS

Assemble upper leg A together with down leg A, B-B, C-C and D-D.

2. INSTALLATION OF ASSEMBLED WOODEN LEGS TO THE BOTTOM OF THE SEAT

IMPORTANT! Tighten the screws, but not too tight!

3. ASSEMBLY OF LEG SUPPORTS AND FOOT REST

3a – Assemble leg supports together with screw C and a nut. Holes of the leg supports must point downwards.

3b – Place the foot rest to the front part of high chair and insert both screws A, then install the leg supports.

Note 1: Leg support marked with O must be installed on the left side of high chair.

Note 2: Screw must go through the foot rest hole, wooden leg of high chair and leg support before be fixed with the nut.

At last assemble the leg support to other legs of high chair with screws B and the rest of the nuts. Tighten screw C and the nut.

4. FOOD TRAY ASSEMBLY (3 positions)

CAUTION! Press the tray to make sure it is fixed!

CAUTION! To assure safe usage, food tray must be fixed to the armrest at least by two of the holes.

5. RESTRAINT SYSTEM (SAFETY HARNESS)

Press the button in center of buckle and split the belts.

Move the buckles upwards or downwards to adjust the length of belts.





ATTENTION! Safety harnesses must not be worn out or torn and buckles must be strong, without any damages and provide secure connection.



ATTENTION! The harness must fit well the baby and must not be twisted. They must not change their length after they are locked!

6. SETTING FORM HIGH TO SMALL CHAIR

6a – Remove down legs.

6b – Place the anti-slip pads before usage.

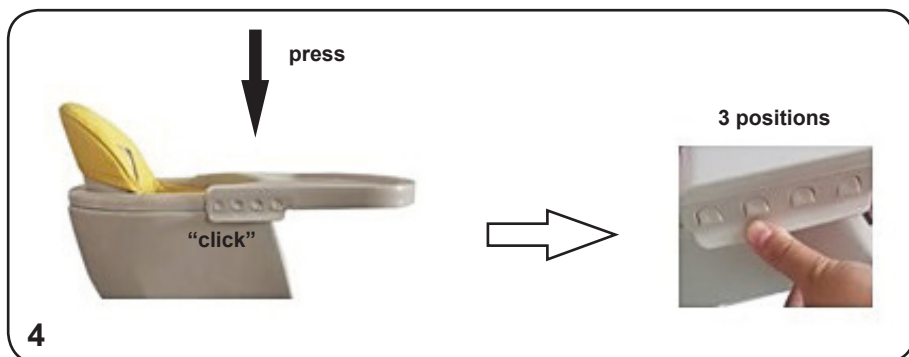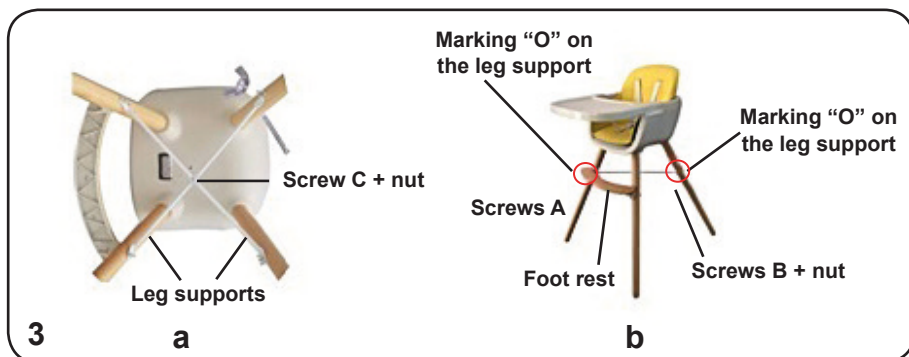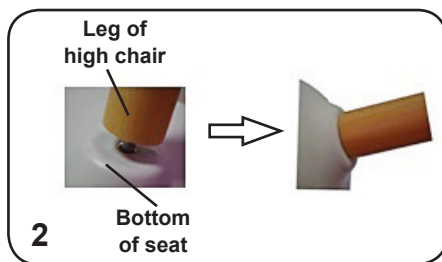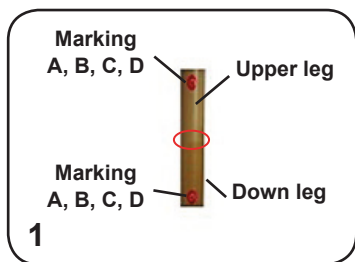

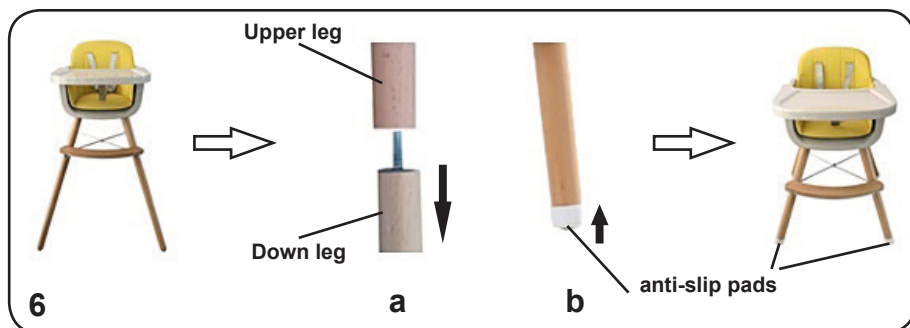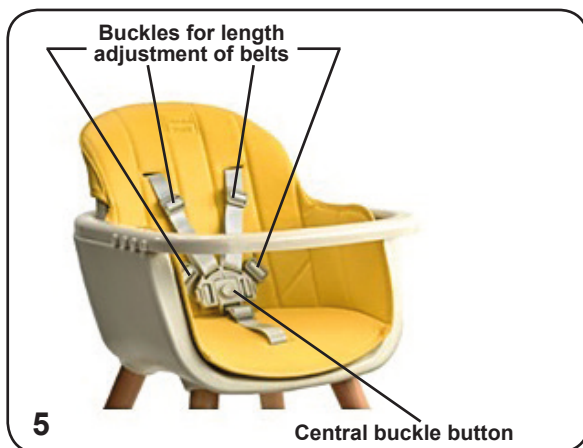

CARE AND MAINTENANCE

- ❖ Clean the fabrics, plastic parts and metal parts with damp cotton cloth or sponge and mild soap.
- ❖ Do not use abrasive, bleach or other aggressive detergents.
- ❖ Always after cleaning leave the high chair fully dry and after that use it or store it. It may appear mold to your high chair if you keep it moist.
- ❖ Do not put any objects and things in high chair or on the top of it to avoid damages of the structure.
- ❖ Always store your high chair indoors. Do not expose to direct environment influence - sun, rain, moisture and high temperature intervals.

Fabric Composition:

Outer: polyester and PU leather

Filling: 100% polyester





1 Goliarnokonarsko shosse, Plovdiv, BULGARIA
www.chipolino.com