## IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!

# INSTRUCTION FOR USE OF CO-SLEEPING CRIB WITH DROP SIDE "BABY BOSS"



This product Chipotho has been manufactured in accordance with the Product Safety Directive 2001/95/EU of the European Parliament and The Council and with European standard EN 1130: 2019 "Children's furniture. Cribs. Safety requirements and test methods.", and the regulations of national law, including Consumer Protection Law.

## FOLLOW ALL WARNINGS, INSTRUCTIONS AND RECCOMENDATIONS IN THIS MANUAL IN ORDER TO GUARANTEE THE SAFE USE OF THIS PRODUCT

### **!** CAUTION! WARNINGS!

- WARNING! DO NOT USE THIS PRODUCT WITHOUT READING THE INSTRUCTIONS FOR USE FIRST!
- WARNING! NEVER LEAVE THE CHILD UNATTENDED!
- WARNING! STOP USING THE PRODUCT AS SOON AS THE CHILD CAN SIT OR KNEEL OR PULL ITSELF UP!
- WARNING! DO NOT PLACE ADDITIONAL OBJECT IN COT (SUCH AS TOYS, PILLOWS).
   PLACING ADDITIONAL ITEMS (SUCH AS TOYS, PILLOWS, ETC.) IN THE PRODUCT MAY CAUSE SUFFOCATION!
- WARNING! DO NOT PLACE THE PRODUCT CLOSE TO ANOTHER PRODUCT, WHICH COULD PRESENT A DANGER OF SUFFOCATION OR STRANGULATION, E.G. STRINGS, BLIND/CURTAIN CORDS, ETC.!
- WARNING! IN ORDER TO AVOID THE RISK OF CHILD'S NECK ENTRAPMENT IN THE TOP RAIL
  OF CRIB'S DROP SIDE, LOCATED NEXT TO ADULT'S BED, THE TOP RAIL SHOULD NOT BE
  HIGHER THAN ADULT'S BED MATTRESS!
- WARNING! IN ORDER TO AVOID THE RISK OF CHILD'S ENTANGLEMENT, THE BELTS WHICH FIX THE PRODUCT NEXT TO THE ADULT'S BED MUST BE KEPT OUT OF REACH AND OUT OF THE PRODUCT.
- WARNING! IN ORDER TO AVOID THE RISK OF CHILD FALLING OUT OF THE PRODUCT, IT SHOULD BE USED ONLY IF IT IS WELL FIXED TO ADULT'S BED OR IF THE DROP SIDE IS FIXED IN ITS HIGER POSITION
- · WARNING! DO NOT USE MORE THAN ONE MATTRESS IN THE PRODUCT.
- If you use a mattress, which is not provided by the manufacturer, make sure it has the appropriate
  thickness and is suitable for the product. The internal height between top edge of the mattress and the
  top edge of side rail should be at least 200 mm (SEE THE MARKING ON INSIDE OF THE CRIB).
- DANGER! ALWAYS KEEP THE DROP SIDE FIXED IN ITS HIGHER POSITIN WHEN PRODUCT IS NOT FIXED NEXT TO ADULT'S BED!
- ATTENTION! THIS PRODUCT IS SUITABLE TO BE ATTACHED TO ADULT BEDS WHICH HAVE DISTANCE BETWEEN THE FLOOR AND THE TOP EDGE OF THE MATTRESS 43 - 61 CM.
- The product should be placed only on a horizontal floor! Uneven surfaces may cause the product to be unstable!
- · Young children should not be allowed to play unsupervised in the vicinity of the product!
- Before each use make sure that all fixings are locked.
- **DO NOT** use crib if any parts are missing, damaged, or broken. Contact manufacturer or an authorized dealer for replacement parts and instructional literature if needed.
- **DO NOT** substitute parts! The manufacturer shall not be responsible for the safety of the product in case substitute parts were used which were not approved and/or provided by the manufacturer!
- All assembly fittings should always be tightened properly and that care should be taken that no screws are loose, because a child could trap parts of the body or clothing (e.g. strings, necklaces, ribbons for babies' dummies, etc.), which would pose a risk of strangulation.
- Be aware of the risk of burning cigarettes, open fires and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the product.
- DO NOT use the body of the product without its frame.
- The product shall **NEVER** be used in an inclined position.
- When using the function "Co-sleep mode (fixed to adult's bed)" in order to prevent the risk of suffocation hazard due to entrapment, the product shall be securely fixed to the adult's bed using the attachment system.
- Use only the belts for fixing the crib next to adult's bed which are provided with this product!
   DO NOT use any other belts or system for fixing!

- The crib must be tight against the adult's bed and no gap is allowed between crib and the adult's bed
  mattress. DO NOT use the product if you find there is a gap! Do not fill the gap with pillows, blankets
  or other objects.
- · Check if the crib is securely fixed to adult's bed by trying to pull it away from the bed.
- The product must NOT be used for more than one child at a time!
- Assembly, folding and unfolding of the product to be done by adults ONLY!
- DO NOT allow children younger than 3 years old near the product during the assembly or disassembly in order to prevent the risk of injury or swallowing of small parts!
- The plastic bags must be kept away from children to avoid the risk of suffocation!

#### **MAIN FEATURES**

- The product is intended for children aged 0 to 6 months weighing no more than 9 kg;
- "Co-sleep mode (fixing to the adult's bed)", that allows the parent to safely sleep close to the child;
- · Height adjustable and anti-reflux option;
- · Rocking function;
- · Easy and compact folding for better storage.

#### MAIN PARTS

Please, make sure that all parts are available:



#### INTSTRUCTIONS FOR ASSEMBLY AND FUNCTIONS

CAUTION! Follow exactly the instructions given and check the pictures.

**CAUTION!** AFTER EACH OPERATION, MAKE SURE THAT EACH FIXING IS SECURE!

CAUTION! In most cases after the completion of an operation you will hear a clicking sound.

**CAUTION!** Keep away your fingers from pinching during assembly!

No tools are required to complete the assembly of this product.

The assembly and functions are numbered from 1 to 9.

Use the operations descriptions given in this manual and their matching picture.

#### **ASSEMBLY**

#### 1 - UNFOLDING THE FRAME WITH UPHOLSTERY

- 1-1 Place the frame as shown in the picture.
- 1-2 Lift the tube (1) and insert it in the plastic base (2), until you hear a "click" sound.
- 1-3 Lift and fix the other tube as well.
- 1-4 Lift the base of the cot, insert and fix the screw in the plate, as shown in the picture.
- 1-5 Fix the screw on the other side as well.
- 1-6 Flip the cot.

#### 2 - UNFOLDING THE SIDE SUPPORTS

Unfold the side supports, as shown in the picture, until you hear a "click" sound.

#### 3 - INSTALLING THE STORAGE BASKET

- 3-1 Install the storage basket to the side supports by sliding each of the four basket ends to the corresponding plate on the side supports.
- 3-2 Fix it using the screwdriver.

#### 4 - INSTALLING THE COT ON THE FRAME

- 4-1 Position the cot on the frame
- 4-2 Press the buttons on two sides and insert the cot tubes in the plastic openings on the frame.

#### 5 - DROP SIDE

5-1 - Using the function "FIXING TO THE ADULT'S BED ":

Unzip the two zippers on the drop side. Press the buttons (A), lift the top rail (A) and push it down (C). Fix it using the buckles on the bottom of the cot (B).

5-2 – Using the product as a baby crib:

Lift the drop side, fix the top rail to the frame (D) and close the zippers on two sides (E).

#### **FUNCTIONS**

#### 6 - "FIXING TO THE ADULT'S BED"

- 6-1 Clip strap buckle to both side and bottom of the crib as shown in the picture.
- 6-2 Pull the free end of the strap around the parent's bed frame (not mattress), then close second buckle on the strap, and tighten the loop of the strap.

ATTENTION! The straps must pass around parent's bed, NOT around the MATTRESS!

6-3 – **ATTENTION!** Tighten the straps tightly against the adult's bed side!

#### 7 - ROCKING FUNCTION

Press the button and twist the lower tube until you hear a "click" sound and the tube is fixed. Now you can use the rocking function.

**ATTENTION!** DO NOT USE THE ROCKING FUNCTION WHEH THE CRIB IS ATTACHED TO THE PARENT'S BED.

#### **8 - HEIGHT ADJUSTMENT**

The cot may be adjusted in 7 height positions.

Press the buttons on two sides of the crib and move it to the desired position.

**IMPORTANT!** THE COT MATTRESS LEVEL MAY BE ADJUSTED IN MAXIMUM TWO DIFFERENT HEIGHT LEVELS BETWEEN THE TWO SIDES.

**IMPORTANT!** THE BABY'S HEAD MUST ALWAYS BE IN THE HIGHER POSITION.

#### 9 - FOLDING THE CRIB

 $9\mbox{-}1$  – Press button 1 and lift the cot. Then press button 2 and again lift the cot.

Repeat the same actions on other side of the cot and remove it from the frame.


- 9-2 Turn the cot upside down and release the screws, as shown in the picture.
- 9-3 Press the tube button (1), lift the tube up (2), then release it (3).
- 9-4 Press he buttons on both sides of the side supports and fold it.

#### 10 - MOSQUITO NET


10-1 - Place the mosquito net over the cot

10-2 and 10-3 Fix the mosquito net with snap buttons to the upholstery of the cot.



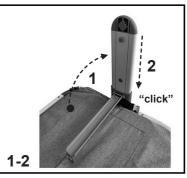





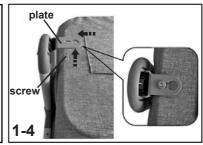







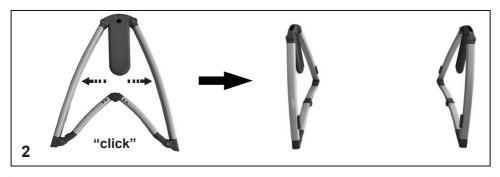


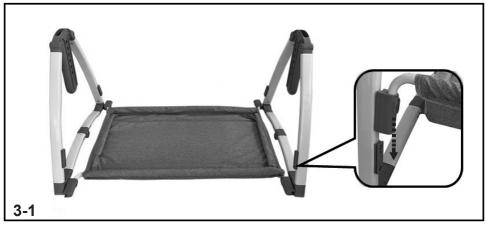


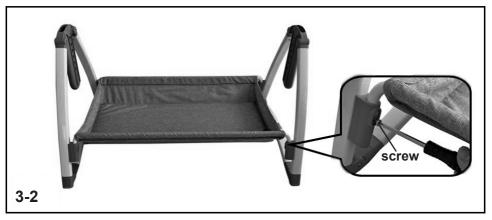





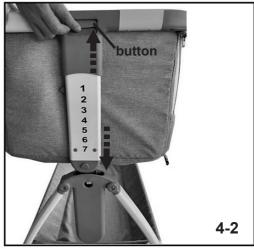


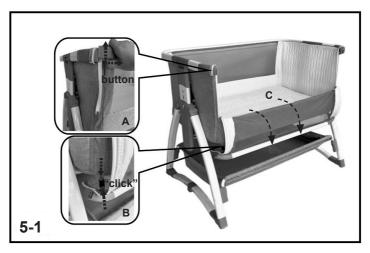


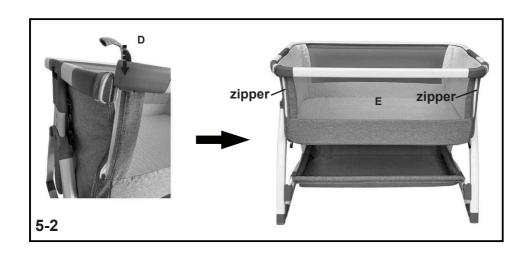

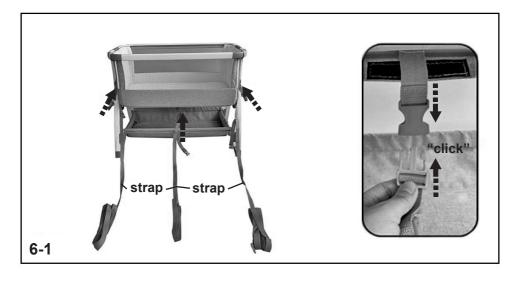

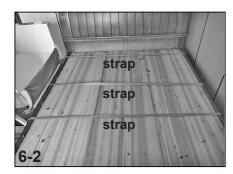

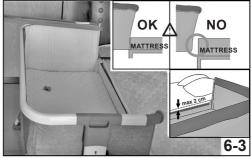


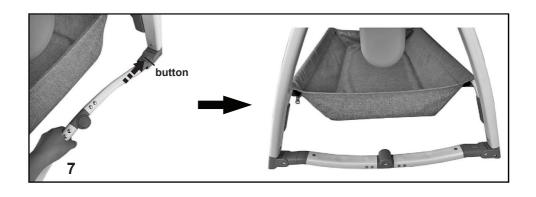











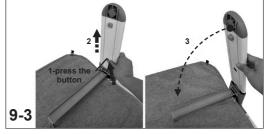

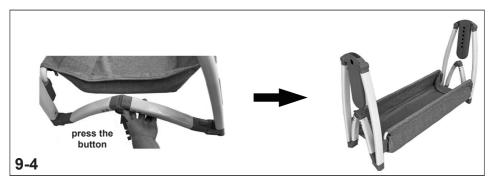

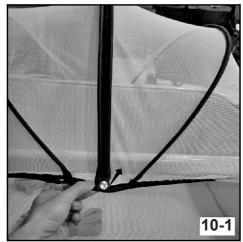

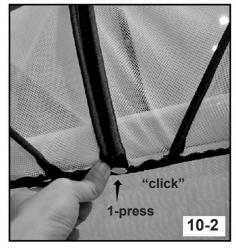

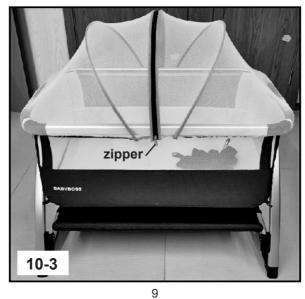

#### **CARE AND MAINTENANCE GUIDELINES**

- Do not apply strong pressure on the mechanisms for adjusting and folding, as this may damage or brake them.
- · Clean the plastic and metal parts with wet soft cotton cloth or sponge and mild detergent.
- The fabric parts may be hand washed 30° C. Follow the instruction from the washing label.
- · Do not tumble dry or use drying machine!
- · Do not use aggressive detergents containing abrasive particles, ammonia, bleach or alcohol.
- · Always air dry the crib and mattress before storing them to avoid the forming of mold.
- Store the product in a clean and dry place. Do not expose it to direct environment influence sunlight, rain, moisture or drastic temperature changes!
- Do not place objects or other products on top of the products as this may damage its construction or upholstery.
- In case of any problems connected with the normal use of the crib, consult the manufacturer or authorized dealer.

Materials used: plastic, textile, metal.

KOSBB022xxxx

