


**IMPORTANT! READ CAREFULLY AND KEEP THIS USER'S  
MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE!**

## **INSTRUCTION MANUAL FOR BABY STROLLER “ESTELLE”**

**ESTELLE**

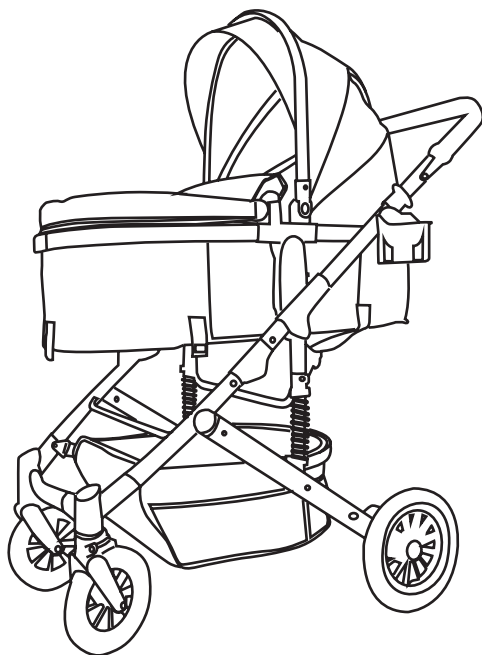

This stroller **chipolino** has been manufactured in accordance with the Product Safety Directive 2001/95/EU of the European Parliament and The Council and with European standard EN 1888-1 “Child care articles. Wheeled child conveyances. Part 1: Baby strollers and carry cot”, and the regulations of national law, including Consumer Protection Law.

**ATTENTION! YOUR CHILD WILL BE MOST SECURE IF YOU FOLLOW  
THE INSTRUCTIONS AND RECOMMENDATIONS GIVEN IN THIS USER'S MANUAL!**

**WARNING! INSTRUCTIONS AND WARNINGS FOR SAFETY**

- ❖ **CAUTION!** NEVER LEAVE YOUR CHILD UNATTENDED!
- ❖ **CAUTION!** ALWAYS USE SAFETY BELTS, AS SOON AS THE CHILD CAN REMAIN IN A SITTING POSITION UNAIDED AND CAN PUSH HIMSELF WITH HANDS OR KNEES!
- ❖ **CAUTION!** MAKE SURE THAT ALL LOCKING MECHANISMS ARE ENGAGED BEFORE PLACING THE CHILD IN THE STROLLER.
- ❖ **CAUTION!** MAKE SURE THE CHILD IS IN SAFE PLACE AWAY FROM THE STROLLER WHEN YOU MAKE ADJUSTMENTS, FOLDING OR UNFOLDING OF THE STROLLER.
- ❖ **CAUTION!** DO NOT ALLOW YOUR CHILD TO USE STROLLER AS A TOY!
- ❖ **CAUTION!** ALWAYS CHECK IF THE ATTACHMENT DEVICES OF SEAT UNIT OR CAR SEAT ARE PROPERLY FIXED TO THE STROLLER'S FRAME BEFORE USAGE.
- ❖ **CAUTION!** THE STROLLER IS NOT SUITABLE FOR RUNNING OR SKATING!
- ❖ THE CARRY COT IS SUITABLE ONLY FOR A CHILD, WHO CANNOT SIT UNAIDED, ROLL OVER AND CANNOT PUSH ITSELF ON ITS HANDS AND KNEES! MAXIMUM WEIGHT OF THE CHILD: 9 kg!
- ❖ USE THE POSITION FOR SITTING AFTER YOUR CHILD TURNS 6 MONTHS!
- ❖ KEEP AWAY FROM FIRE!
- ❖ DO NOT LIFT THE STROLLER BY THE FRONT BAR, BECAUSE THIS CAN LEAD TO SERIOUS INJURIES!
- ❖ DO NOT ADJUST OR SET THE BACKREST POSITION WHEN SEAT UNIT IS IN CARRY COT MODE!
- ❖ Use the stroller for a child weighing not more than 15 kg.
- ❖ Initial assembly, folding and unfolding to be done only by adult!
- ❖ Do not put in carry cot additional mattress, thicker than 20 mm!
- ❖ Always engage the parking devices when the stroller has stopped and is not moving, especially when you place or take out your child from it!
- ❖ Make sure the safety belts are fastened and fit well to the child before usage.
- ❖ The maximum load for the storage basket is 3 kg.
- ❖ The maximum load for the accessories bag (in case there is one) is 2 kg.
- ❖ Do not overload the stroller! Always balance your stroller in a way to keep it stable and prevent the risk of tip-over!
- ❖ This stroller is intended for use for one child at a time!
- ❖ Do not use any spare parts or other components, which are not approved by the producer! The producer does not take any responsibility for the safety of the child when you have not used the proper and original spare parts, approved and provided by him!
- ❖ Do not apply any changes or modifications to the stroller's construction! Contact the dealer or an authorized repair service for advice and/or repair instead!
- ❖ Discontinue the usage, if you find worn out or loose joints, damaged or missing parts! There is a risk of injury of the child!
- ❖ Do not allow children younger than 3 years near the stroller during the assembly or disassembly, in order to prevent the risk of injury or swallowing of small parts!
- ❖ Strings can cause strangulation! Do not place additional strings to the product to avoid injuries!
- ❖ Never use the stroller on stairs or escalators! Use extra care when going up or down a pavement or step!
- ❖ The packaging of the product must be kept out of the reach of children to avoid the risk of strangulation!



## MAIN FEATURES


- ❖ Stroller is suitable for newborn babies and children aged 0-36 months and weighing up to 15 kg;
- ❖ The seat transforms into a carry cot that can be used for children aged less than 6 months and weighting not more than 9 kg.;
- ❖ Car seat "ESTELLE", Group 0+ (0-13 kg). It is safe and compatible with stroller's frame;

**Note:** Car seat is sold separately. All instructions and recommendations for safety usage and installation are given in separate user's manual;

- ❖ Seat unit can be installed in 2 modes – mother facing mode and motion facing mode;
- ❖ 5-point safety harness system;
- ❖ Adjustable backrest;
- ❖ Adjustable handle in height;
- ❖ Adjustable canopy.

## MAIN PARTS

Please, check if all described parts are available:

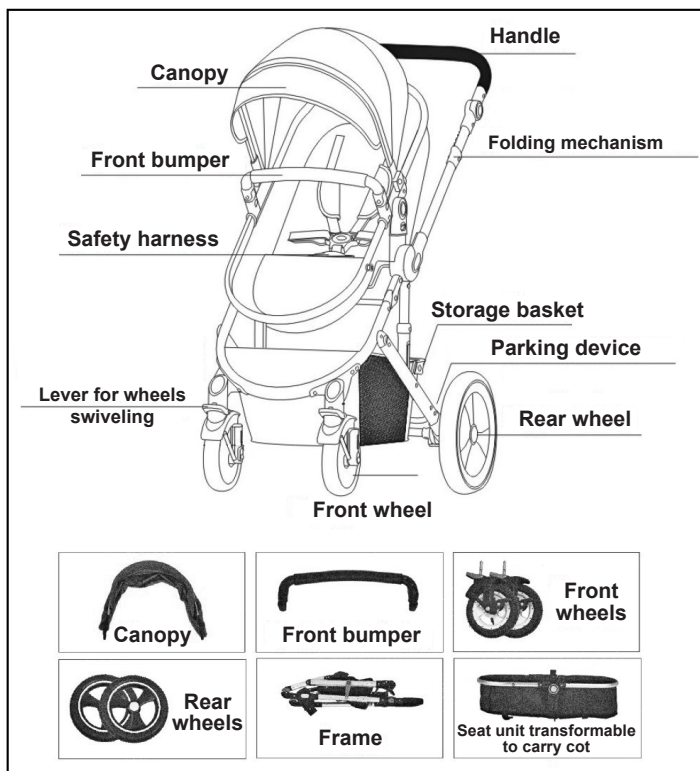

## ASSEMBLY INSTRUCTION AND FUNCTIONS

This stroller is supplied partially assembled. In order to complete the assembly, you don't need any tools.

**ATTENTION!** Follow exactly the instructions given and check the pictures.

**ATTENTION!** After each operation, make sure that you have followed the instructions correctly and the fixing is stable.

**ATTENTION!** Properly fixing is often accompanied with click sound.

Assembly and functions are given in figures 1-14. Use all descriptions below together with figures with the same number.

### ASSEMBLY

#### 1. OPEN THE FRAME

1-1 – Release the fixing

1-2 – Pull the handle upwards with your hand until you hear a click sound and frame fixes in open position

1-3 – Open frame

#### 2. INSERT AND REMOVE OF FRONT WHEELS

2-1 – Assemble the front wheel with pressure until you hear a click sound

2-2 – To remove the wheel, press the button and take the wheel out of the frame.

#### 3. INSERT AND REMOVE OF REAR WHEELS

3-1 – Assemble the rear wheel with pressure until you hear a click sound

3-2 – To remove the wheel, press the button and take the wheel out of the rear axis.

#### 4. INSTALLATION OF SEAT/CARRY COT

To remove the seat, press the buttons at both sides and pull the seat out of the frame.

4-3 and 4-4 – Installation of seat in parent facing mode (direction reversible to motion).

4-5 and 4-6 – Installation of seat in motion direction.

#### 5. INSERT AND REMOVE OF FRONT BUMPER BAR

To remove the front bumper bar (5-2), press the buttons and pull the bumper bar out of the frame.

#### 6. ASSEMBLY OF CANOPY

**Note:** Before using the stroller, make sure that the zipper is closed.

### FUNCTIONS

#### 7 - HANDLE HEIGHT ADJUSTMENT

Press the buttons and set the handle upwards or downwards until you reach the most comfortable and required position.

#### 8 – CANOPY ADJUSTMENT

8-1 – Folding – push with your hand;

8-2 – Unfolding – pull with your hand.

#### 9 – PARKING DEVICES

**ATTENTION!** Apply the parking devices always when stroller is not in motion to avoid risk of stroller sliding.

#### 10 - BACKREST AND SEAT ADJUSTMENT

10 – 1 and 10-2 – Press the mechanism with two fingers and move it upwards or downwards. Release the mechanism to fix the backrest in required position;

10-3, 10-4 and 10-5 – seat can be set in 3 positions. Press the button for seat adjustment and release when you reach the required position.

**ATTENTION!**

#### 11 – RESTRAINT SYSTEM (5-POINT SAFETY HARNESSSES)

Adjust the shoulder belts and waist belts using the adjuster buckles.

**Note:** The harness must fit well the baby and must not be twisted.

**IMPORTANT!** Regularly check if safety harnesses are fixed to stroller and well fastened! Safety harnesses must not be worn out or torn and buckles must be strong, without any damages and provide secure connection.



## 12- FOLDING OF STROLLER

12-1 – Remove the seat unit from the frame.

12-2, 12-3 – Release the folding mechanisms at both sides of the handle as pulling them upwards and fold the frame.

12-4 – Lock the fixing.

**ATTENTION!** Lock the stroller in folded position using the fixing (11-5)!

## 13 – COVERT FROM SEAT TO CARRY COT AND FROM CARRY COT TO SEAT

13-1, 13-2 – Set the backrest in upright position.

13-3, 13-4 – fasten the belts under the seat and under the leg rest.

To use the carry cot, set the backrest in lying position and unfasten the belts under the seat and under the leg rest.

**ATTENTION!** WHEN THE SEAT IS CONVERTED INTO CARRY COT, IT MUST ALWAYS BE IN A FACE TO FACE MODE.

**ATTENTION!** When the seat is converted into carry cot, always unlock shoulder and waist harnesses from the stroller, adjust and cover them with mattress that is not thicker than 20 mm!

## 13 – INSTALLATION OF CAR SEAT ON FRAME OF STROLLER

13-1 – Set the backrest in upright position;

13-2 – Lock the belts under the seat and under the leg rests.

13-3 – Cot transformed into a seat.

**Note:** For your comfort, before install the car seat on stroller's frame, apply the parking devices.





On the frame of this stroller, you can install car seat "ESTELLE" through the adaptors. Install the adaptors to the car seat and then the car seat to the frame of stroller.






14-1 and 14-2 Installation of adaptors to car seat.


14-3 and 14-4 – Install of car seat to stroller's frame.

**ATTENTION!** Always install the car seat in face to face mode.






**ATTENTION!** Always remove the adaptors from the stroller before folding!

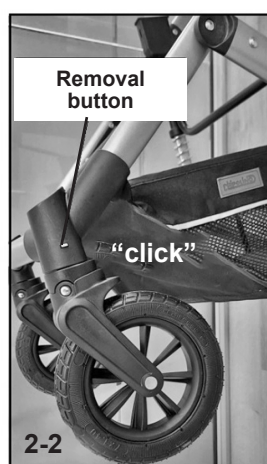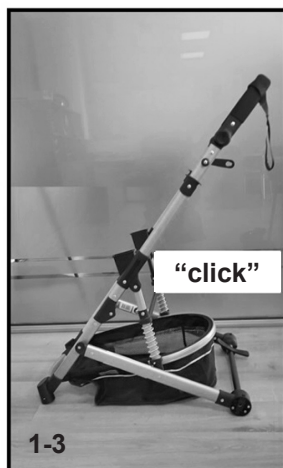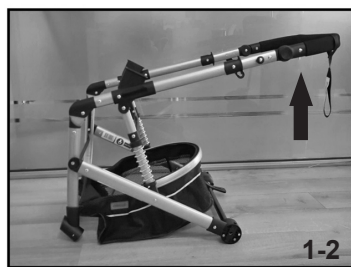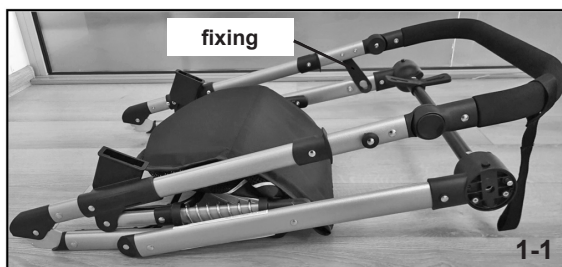

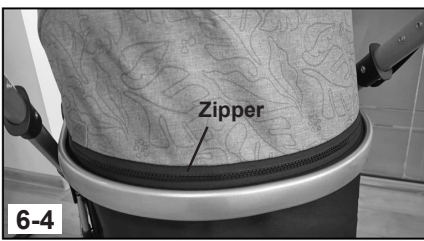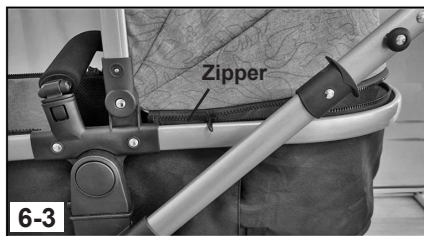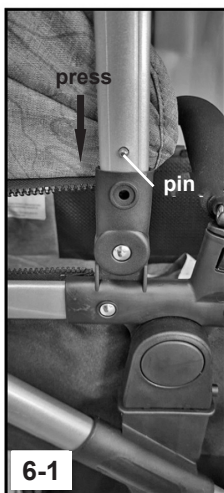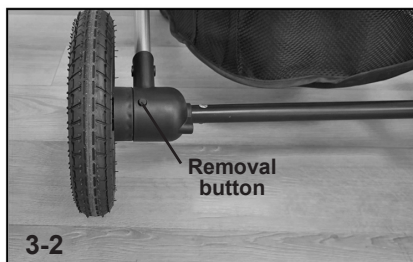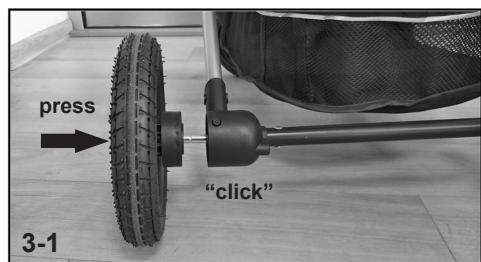

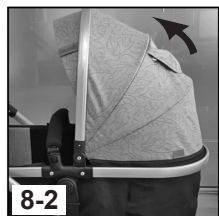



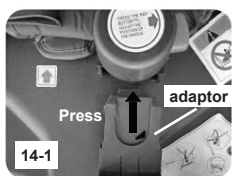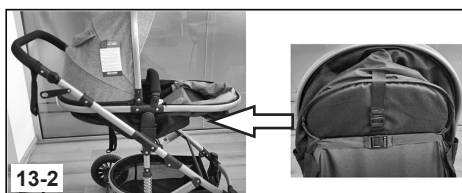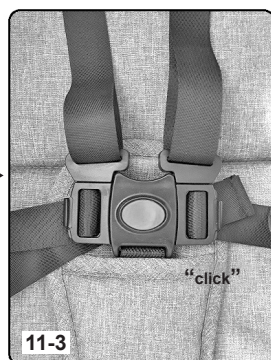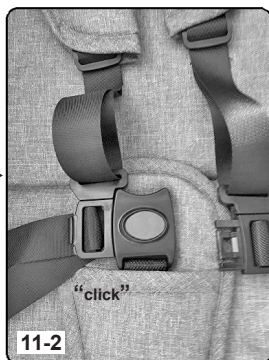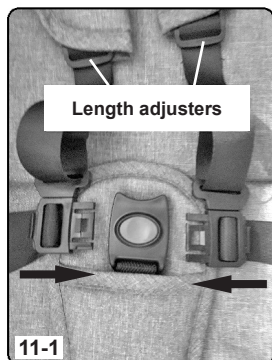

## CARE AND MAINTENANCE

- ❖ The brakes and wheels wear out faster than other parts. Replace them when necessary.
- ❖ Regularly oil the moving parts. Use silicone oil or silicone spray for oiling.
- ❖ Dirt could make difficult the function of your stroller. Clean and oil all dirty metal and plastic parts regularly.
- ❖ Clean the fabrics, plastic parts and metal parts with damp cotton cloth or sponge and mild soap.
- ❖ Do not use abrasive, bleach or other aggressive detergents.
- ❖ Always after cleaning leave the stroller fully dry and after that use it or store it. It may appear mold to your stroller if you keep it moist.
- ❖ Always store your stroller indoors. The effect of the environment – sea air, road covered with salt, acid rains, etc., as well as storing in the open air lead to corrosion.
- ❖ Please, contact your authorized dealer for problems connected with the use or repair of this stroller.

### Fabric Composition:

**Outer:** 100% polyester

**Filling:** 100% polyester



**Used materials:** plastics, textile, metal.

**KKES022xxxx**



---

1 Goliarnokonarsko shosse, Plovdiv, BULGARIA

[www.chipolino.com](http://www.chipolino.com)