

**IMPORTANT! KEEP THIS USER'S MANUAL  
IN A SAFE PLACE FOR FUTURE REFERENCE!**

**INSTRUCTION MANUAL FOR  
STROLLER AND CARRY COT “ZARA” –  
PARTS OF SET “ZARA” 3 IN 1**

**ZARA  
3in1**



This stroller **chipolino** has been manufactured in accordance with the Product Safety Directive 2001/95/EU of the European Parliament and The Council and with European standard EN 1888-1 “Child care articles. Wheeled child conveyances. Part 1: Baby strollers and carry cot”, EN 1888-2 “Child care articles. Wheeled child conveyances. Part 2: baby strollers for children from 15 kg to 22 kg” and EN 1466: 2014 “Child care articles. Carry cots and stands. Safety requirements and test methods” and the regulations of national law, including Consumer Protection Law.

**FOLLOW ALL WARNINGS, INSTRUCTIONS AND RECOMMENDATIONS IN  
THIS MANUAL IN ORDER TO GUARANTEE THE SAFE USE OF THIS PRODUCT:**

**CAUTION! WARNINGS!**


- ❖ **CAUTION! NEVER LEAVE YOUR CHILD UNATTENDED!**
- ❖ **CAUTION! THE SEAT OF THIS STROLLER IS NOT SUITABLE FOR BABIES UNDER 6 MONTHS OF AGE.**
- ❖ **CAUTION! ALWAYS USE THE RESTRAINT SYSTEM (SAFETY BELTS)!**
- ❖ **CAUTION! THE CARRY COT IS SUITABLE ONLY FOR A CHILD, WHO CANNOT SIT UNAIDED, ROLL OVER AND CANNOT PUSH ITSELF ON ITS HANDS AND KNEES! MAXIMUM WEIGHT OF THE CHILD: 9 KG!**
- ❖ **CAUTION! USE THE CARRY COT ONLY ON FLAT, HORIZONTAL AND DRY SURFACE!**
- ❖ **CAUTION! NEVER USE CARRY COT ON A STAND!**
- ❖ **CAUTION! MAKE SURE THAT ALL LOCKING MECHANISMS ARE ENGAGED BEFORE USE.**
- ❖ **CAUTION! MAKE SURE YOUR CHILD IS AT SAFE DISTANCE AWAY FROM THE STROLLER DURING ADJUSTMENTS, FOLDING OR UNFOLDING OF THE STROLLER.**
- ❖ **CAUTION! DO NOT ALLOW YOUR CHILDREN TO PLAY WITH THE STROLLER!**
- ❖ **CAUTION! BEFORE EACH USE, CHECK THE STABILITY OF FIXING OF SEPARATE PARTS!**
- ❖ **CAUTION! BEFORE USE CHECK IF ALL DEVICES WHICH ARE ATTACHED TO THE SEAT, CARRY COT OR CAR SEAT ARE CORRECTLY AND WELL FIXED.**
- ❖ **CAUTION! THIS PRODUCT IS NOT SUITABLE FOR RUNNING OR SKATING!**
- ❖ **DO NOT LIFT THE STROLLER BY THE FRONT BAR, BECAUSE THIS CAN LEAD TO SERIOUS INJURIES!**
- ❖ **KEEP AWAY FROM FIRE!**
- ❖ Use the stroller for a child weighing not more than 22 kg.
- ❖ Use the carry cot for a child weighting up to 9 kg.
- ❖ Initial assembly, folding and unfolding to be done only by adult!
- ❖ Do not place in carry cot additional mattress thicker than 20 mm!
- ❖ Always engage the brakes when the stroller has stopped and is not moving, especially when you place or take out your child from it!
- ❖ Make sure the safety belts are fastened and fit well to the child before usage.
- ❖ The maximum load for the storage basket is 2 kg.
- ❖ The maximum load for a diaper bag (if one is provided) is 2 kg!
- ❖ Do not overload the stroller! Always balance your stroller in a way to keep it stable and prevent the risk of tip-over!
- ❖ Stroller and carry cot are intended for use for one child at a time!
- ❖ Do not use any spare parts or other components, which are not approved by the producer! The producer does not take any responsibility for the safety of the child when you have not used the proper and original spare parts, approved and provided by him!
- ❖ Do not apply any changes or modifications to the stroller's construction! Contact the dealer or an authorized repair service for advice and/or repair instead!
- ❖ Car seat does not replace a carrycot or a bed. Should your child need to sleep, then he should be placed in a suitable cot or bed.
- ❖ Discontinue the usage, if you find worn out or loose joints, damaged or missing parts! There is a risk of injury of the child!
- ❖ Do not allow children younger than 3 years near the stroller during the assembly or disassembly, in order to prevent the risk of injury or swallowing of small parts!
- ❖ Strings can cause strangulation! Do not place additional strings to the product to avoid injuries!
- ❖ Never use the stroller on stairs or escalators! Use extra care when going up or down a pavement or step!
- ❖ The packaging of the product must be kept out of the reach of children to avoid the risk of strangulation!




## MAIN FEATURES

- ❖ Seat unit is suitable for babies and children aged from 6 months up to 4 years or weighing up to 22 kg (whichever comes first);
- ❖ Carry cot is suitable for one child aged less than 6 months and weighing not more than 9 kg. It can be used separately or attached to stroller's frame;
- ❖ Car seat Group 0+ (0-13 kg), model ZARA. It is safe and compatible with stroller's frame;  
**Note:** Car seat is sold separately. All instructions and recommendations for safety usage and installation are given in separate user's manual
- ❖ 5-point safety harness system;
- ❖ Seat unit can be installed in 2 modes – mother facing mode and motion facing mode;
- ❖ Seat position adjustment;
- ❖ Adjustable canopy;
- ❖ Straight motion and swiveling of the front wheels.

## MAIN PARTS DIAGRAM

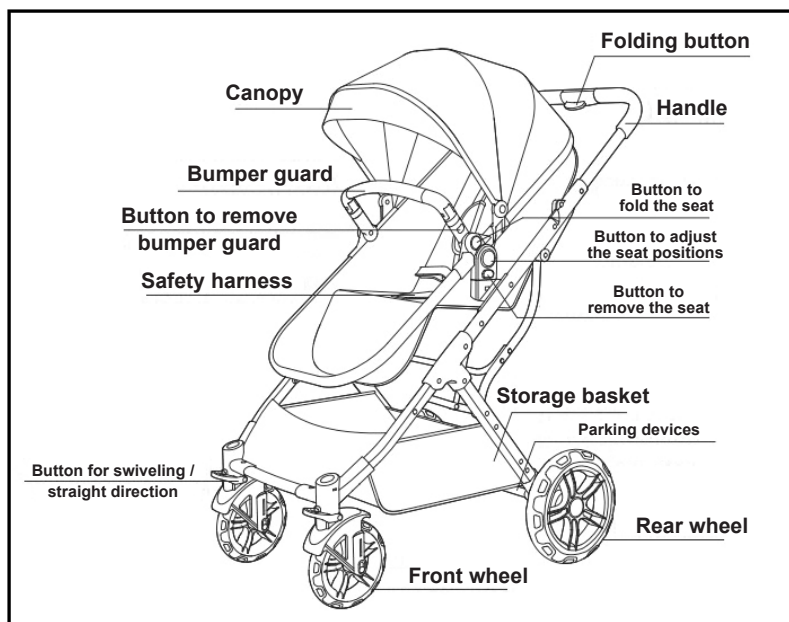

Each package contains:

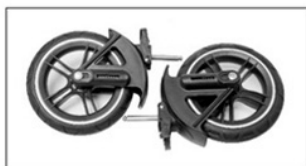

Front wheels




Rear wheels



Frame



**Seat**

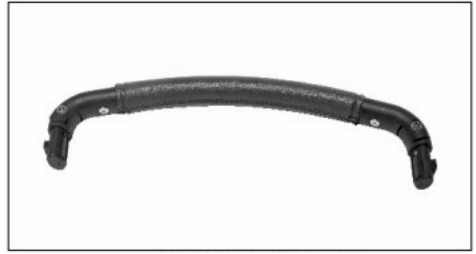

**Bumper guard**

## **ASSEMBLY INSTRUCTIONS AND FUNCTIONS**

This stroller is supplied partially assembled. In order to complete the assembly, you don't need any tools.

**IMPORTANT!** Follow exactly the instructions given and check the pictures. Keep your hands from entrapment!

**IMPORTANT!** After each operation, make sure that you have followed the instructions correctly and the fixing is stable!

**IMPORTANT!** Make sure pins fully jump out of the openings!

**IMPORTANT!** In most cases after the completion of an operation you will hear a clicking sound.

The assembly, disassembly and functions are numbered from 1 to 13. Use the operations descriptions given in this manual and their matching picture.

## **ASSEMBLY**

### **1 – FRAME UNFOLDING**

1-1 Release the fixing

1-2 Grab and pull the handle upwards.

1-3 Fixing of the handle in open position goes with a click sound.

### **2 – INSTALLATION AND REMOVAL OF FRONT WHEELS**

Press the button for removal and pull out the wheel from the frame.

### **3 – INSTALLATION AND REMOVAL OF REAR WHEELS**

Pull the lever for removal downwards and take the wheel out of the frame.

### **4 – INSTALLATION AND REMOVAL OF THE SEAT UNIT**

4-1 – Place the seat to the frame and press until you hear a click sound and seat fixes. To remove it, press the buttons as shown in figure.

Seat unit can be installed in 2 directions – forward facing (fig. 4-2) and rearward facing (fig. 4-3).

### **5 – INSTALLATION AND REMOVAL OF THE BUMPER GUARD**

## **FUNCTIONS**

### **6 – ADJUSTMENT OF THE CANOPY**

**CAUTION!** Always attach the canopy to the backrest to prevent the baby to fall and injury!

Pull or push the canopy with your hand to fold/ unfold it or set it in desired position.

### **7 – SWIVEL AND STRAIGHT MOVMENT OF FRONT WHEELS**

**IMPORTANT!** When using the stroller on uneven surfaces, fix the wheels for straight movement only.

### **8 – PARKING DEVICE**

Press the pedal to activate the parking device and stroller stops. Lift the pedal to release the parking device and stroller can move freely.

**CAUTION!** Always engage the parking device, when the stroller is stationary to avoid the risk of slipping of the stroller!

## **9 – RESTRAINT SYSTEM (5-POINT SAFETY BELTS)**

9-1 – Join the shoulder and waist belts through the hooks. Fasten the safety belt (points 1 and 2) into the central buckle (3). Press the central buckle button in order to unfasten the safety belt.

9-2 – Adjust the belts length using the plastic sliders.

**Remark:** Belt must be snug to child's body and must not be twisted!

**CAUTION!** Periodically check to ensure that the seat belt is securely attached to the stroller frame as well as securely fastened. The belts should not be worn or torn, and plastic buckles and fasteners must be sturdy, free of damage and secure.

## **10 – SEAT POSITION ADJUSTMENT**

Seat can be adjusted in 3 positions.

Press the buttons for seat adjustment at both sides of stroller and set the seat to the desired position.

## **11 – FOLDING THE STROLLER**

**IMPORTANT!** Before folding the stroller, always activate the parking device and empty the storage basket.

11-1 – Set the seat in upright position and fold the canopy. Press the folding buttons for seat (1) and fold it (2).

11-2 - Move the slider at locking mechanism (3) left and at the same time press the folding button (4). Press the handle down (5) until stroller folds.

11-3 - Lock the fixing.

## **12 – ASSEMBLY, ATTACHMENT AND REMOVING OF CARRY COT**

**IMPORTANT!** Head position of the child must never be lower than the position of the body!

12-1 Place the carry cot on flat surface. Rotate the adaptor for fixing to frame (2). Grab with your hand and pull outwards each of the bars until they fit into the channels (3,4) and fix.

12-2 Close the zipper from inside of the fabric. Place the mattress in cot. Place the foot cover and fix it to the carry cot with the zipper. Pull the canopy with your hand to unfold it. Fix the fabric to canopy as shown in fig. (12-2-5).

12-3 Unfold the canopy by pulling it (2). Press the buttons at both sides and fully fold the canopy or set it in middle position (3 and 4).

12-4 – Attachment of carry cot to stroller's frame (12-4-1,2,3)

**Note:** Make sure that carry cot is stable fixed to frame of stroller!

To remove the carry cot press the buttons at both sides simultaneously and remove the carry cot from the frame (12-4-4).

## **13 – INSTALLATION AND REMOVAL OF CAR SEAT “ZARA” ON FRAME OF STROLLER ZARA**

**ATTENTION!** ALWAYS INSTALL THE CAR SEAT IN REARWARD POSITION – CHILD FACING THE PARENT.












13-1 - You can install the car seat on the frame of this stroller using adaptors.

13-2 and 13-3 – Place each of the adaptors to the car seat as shown in the figure. Press until you hear a click sound and adaptors fix.






13-4 - Place the car seat with adaptors on the adaptors of the frame and press until you hear a click. Make sure the car seat is stable fixed to the stroller's frame as trying to pull it upwards.



13-5 – Installed car seat ZARA on frame of stroller ZARA.

13 – 6 - Press the removal buttons upwards and take out the car seat from the frame.

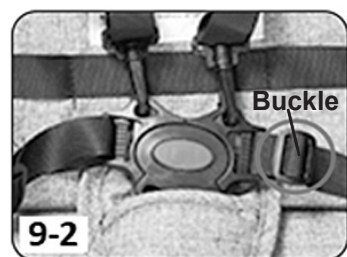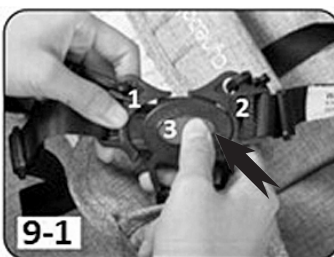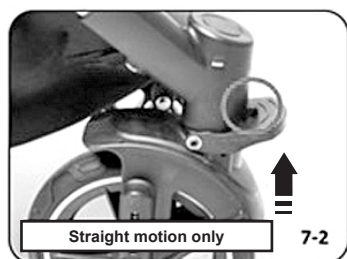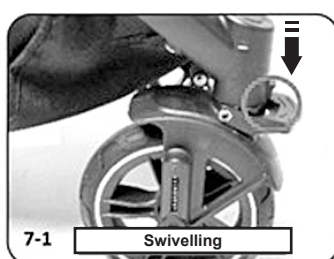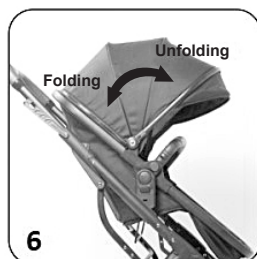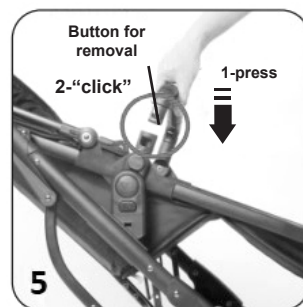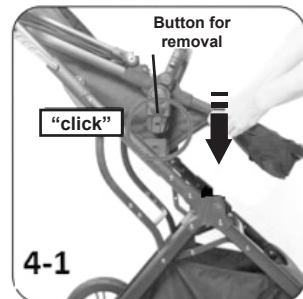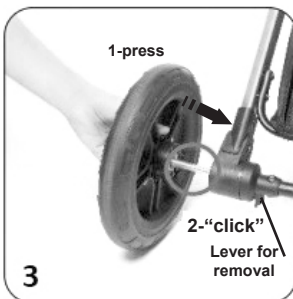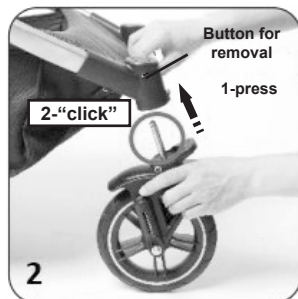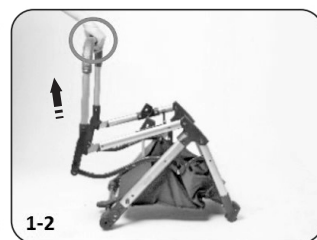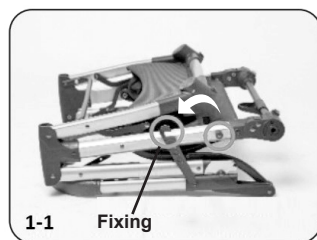




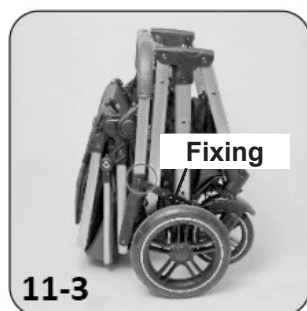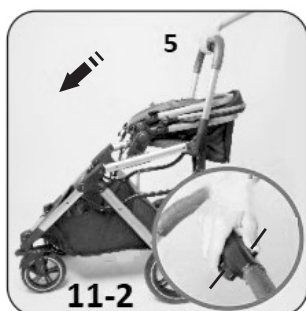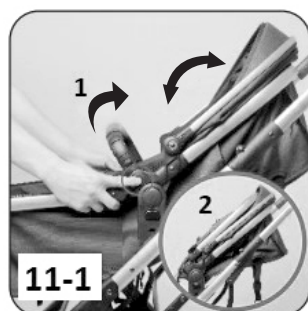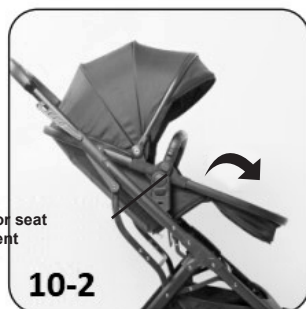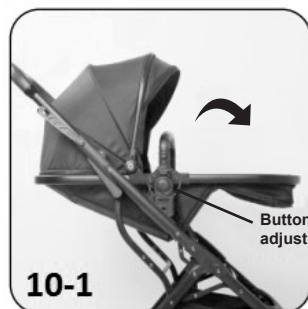

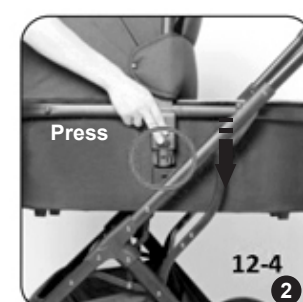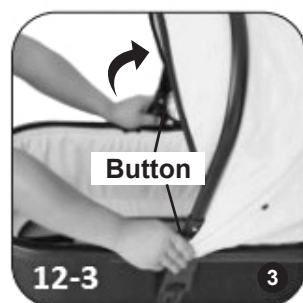



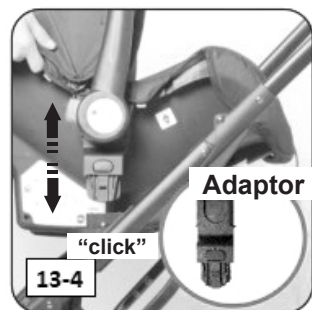

## CARE AND MAINTENANCE GUIDELINES

- ❖ The brakes and wheels wear out faster than other parts. Replace them when necessary.
- ❖ Regularly oil the moving parts. Use silicone oil or silicone spray for oiling.
- ❖ Clean and oil all dirty metal and plastic parts regularly.
- ❖ Clean the fabrics, plastic parts and metal parts with damp cotton cloth or sponge and mild soap.
- ❖ Inside fabric of carry cot can be hand washable at 300.
- ❖ Do not spin or tumble dry!
- ❖ Do not use aggressive detergents, solvents, bleach or spirits to clean your stroller.
- ❖ Always leave the stroller to fully dry after cleaning before you use it or store it. Mold could form if you keep your stroller moist.
- ❖ Always store your stroller indoors in clean and dry place. Do not expose to direct environment influence - sun, rain, moisture and high temperature intervals.
- ❖ Please, contact your authorized dealer for problems connected with the use or repair of this stroller.

### Stroller fabric

**composition:** polyester

**Lining and filling:** 100 % polyester



**Used materials:** plastic, textile, metal.

### Carry cot fabric

**composition:** polyester

**Lining and filling:** 100 % polyester



KKZA02xxxxx



---

Bulgaria, Plovdiv, str. Golyamokonarskoshosse 1

[www.chipolino.com](http://www.chipolino.com)